



## CHANGE OF INK-JET CASSETTE

### 1. Selecting further information

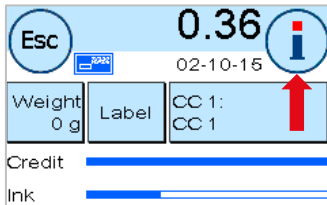


Start Menu:  
Press the "i" key found in the top right of the screen.

### 2. Selecting Printer Settings

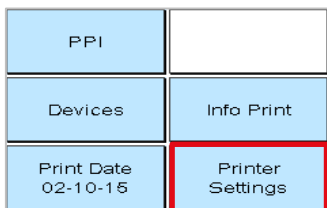

Main Menu:  
Select "Printer Settings" found in the bottom right of the screen.

### 3. Selecting function "Change Ink-Jet Cassette"

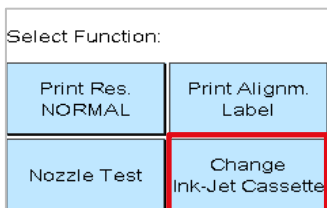

Printer Settings:  
Select "Change Ink-Jet Cassette" and confirm the following question with "YES".

### 4. Open the flap



Open the flap of the Ink-Jet Cassette.

### 5. Prepare removal of Ink-Jet Cassette




Pinch the grips on top of the Ink-Jet Cassette.

### 6. Remove the Ink-Jet Cassette



Keeping grips pinched together, pull the Ink-Jet Cassette towards you to remove it.

### 7. Prepare the new Ink-Jet Cassette

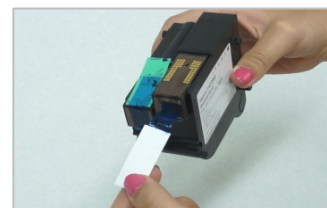

Remove the two protector strips of the new Ink-Jet Cassette being careful not to touch the gold coloured contact points.

### 8. Insert the new Ink-Jet Cassette



Insert the new Ink-Jet Cassette by pinching the grips of the new Ink-Jet Cassette and pushing it in to the franking machine.

### 9. Final check



Release the grips and check whether the locking pins are correctly positioned (see picture).

### 10. Close the flap



Close the flap and confirm with "YES". The Ink-Jet Cassette will then be tested and calibrated by the franking machine.