



## PRINT ALIGNMENT FOR THE MATRIX F12

### 1. Select further information

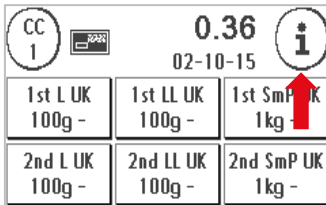


Start Menu:  
Press the "i" key in top right corner of screen.

### 6. Print Alignment X

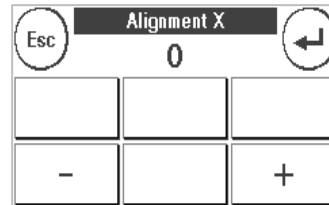


Move to setting 0 (for example) with the - and + keys. Confirm entry with "ENTER".

### 2. Select Printer Settings

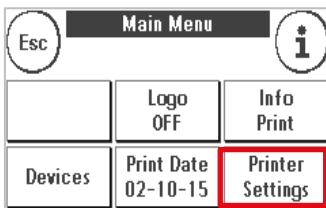


Main Menu:  
Select "Printer Settings" in the bottom right of the screen.

### 7. Print Alignment Y

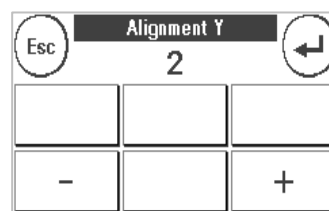


Move to setting 2 (for example) with the - and + keys. Confirm entry with "ENTER".

### 3. Select Print Alignment

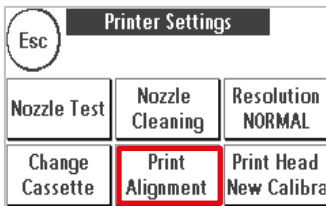


Menu Printer Settings:  
Select "Print Alignment" on right of screen.

### 8. Repeat the Test Print

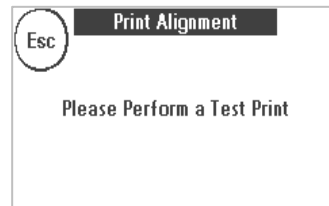


Repeat the Test Print.

### 4. Perform a Test Print

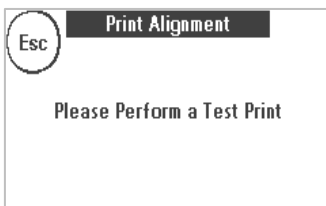


To perform a Test Print, insert a letter to produce an alignment Test Print.

### 9. Confirm Test Print

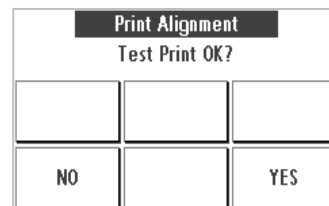

If the Test Print is correct, press "YES" to confirm the settings. Otherwise press "NO" to repeat.

### 5. Test Print

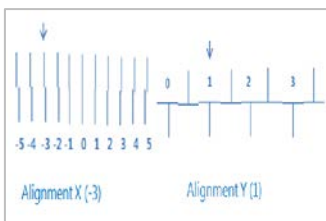

The Test Print shows current settings. The arrows should point to where the lines appear straightest.  
Example:  
Actual: X=-3 / Y=1  
Should be: X=0 / Y=2