



PRINT ALIGNMENT FOR THE MATRIX F22

1. Select further information

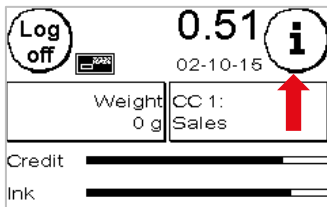


Start Menu:
Press the "i" key in top right corner of screen.

6. Print Alignment X

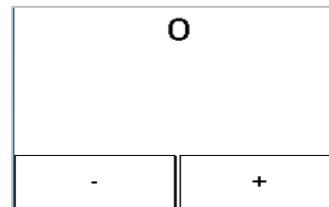


Move to setting 0 (for example) with the - and + keys. Confirm entry with "ENTER".

2. Select Printer Settings

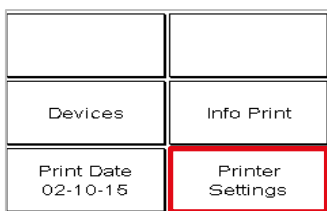


Main Menu:
Select "Printer Settings" in the bottom right of the screen.

7. Print Alignment Y

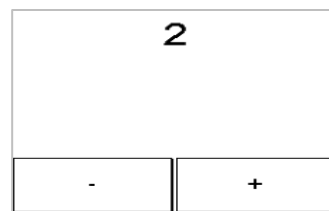


Move to setting 2 (for example) with the - and + keys. Confirm entry with "ENTER".

3. Select Print Alignment

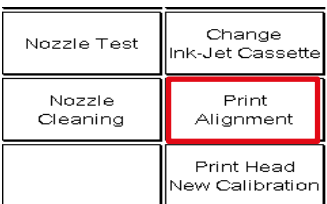


Menu Printer Settings:
Select "Print Alignment" on right of screen.

8. Repeat the Test Print

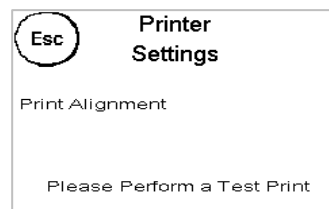

Repeat the Test Print.

4. Perform a Test Print

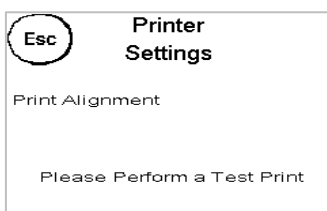


To perform a Test Print, insert a letter to produce an alignment Test Print.

9. Confirm Test Print



If the Test Print is correct, press "YES" to confirm the settings. Otherwise press "NO" to repeat.

5. Test Print

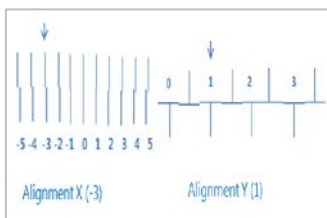

The Test Print shows the current settings. The arrows should point to where the lines appear straightest.

Example:
Actual: X=-3 / Y=1
Should be: X=0 / Y=2