


INSTALLING SOFTWARE FOR THE MATRIX F32-F82

1. Confirm message




Touch the screen to confirm the message.

2. Enter PIN

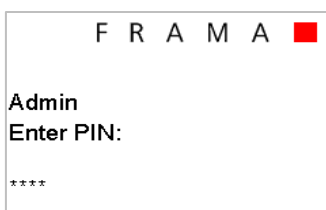


Enter your PIN (1234) and confirm with "OK".

3. Select further information

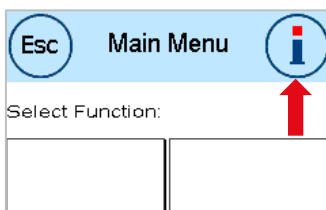


Main Menu: Press the "i" key in top right of screen.

4. Select spanner option

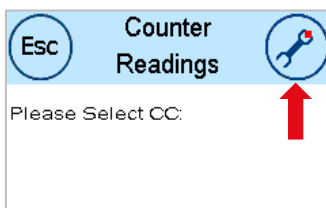


Menu Counter Readings: Select the spanner in the top right of screen.

5. Open Menu "Setup 2"

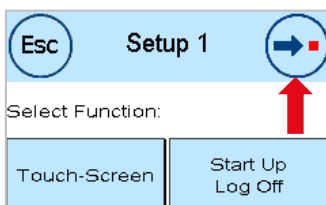


Menu Setup 1: Press the arrow in top right of screen.

6. Select "FramaOnline2"

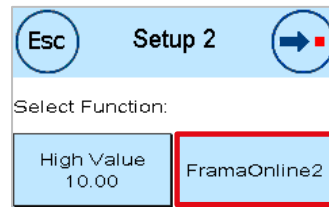


Menu Setup 2: Select "FramaOnline2" in the bottom right of screen.

7. Select "Activation PIN"

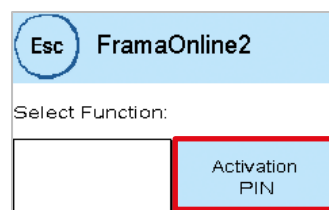


Select "Activation PIN" option and enter the PIN number. Confirm with "OK".
This function is not available in some countries!

8. Select "Installation"

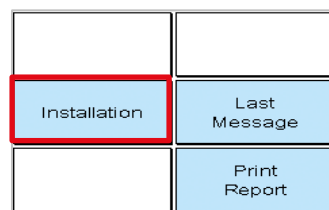

Menu FramaOnline2: Select "Installation".

9. Confirm installation

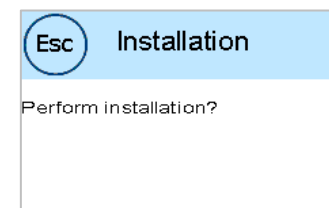

Menu Installation: Confirm the question on the screen with "YES". The installation will now begin. This may take several minutes.